

VidyoRoom™ HD-40 Getting Started Guide




What's Included

Your HD-40 shipped with the HD-40 codec and the following items:

VidyoRoom HD-40		
<ul style="list-style-type: none">■ Power adapter and power cables for the United States – total length 11ft (3.35 m)	<ul style="list-style-type: none">■ VESA mount bracket and hardware■ HDMI to HDMI Cable – 3 ft (1.82 m), Qty. 1	<ul style="list-style-type: none">■ Ethernet cable, Cat5E – 7 ft (2.13 m)■ Infrared remote control with 2 AAA batteries■ External infrared receiver with USB cable – 6 ft (1.828 m)


Note: The installation diagram on the following page shows the Logitech BCC950 ConferenceCam camera and the Phoenix Quattro3 speakerphone. To view a list of these and other peripherals available with VidyoRoom, go to <http://www.vidyo.com/support/peripherals>.

Installing Your HD-40

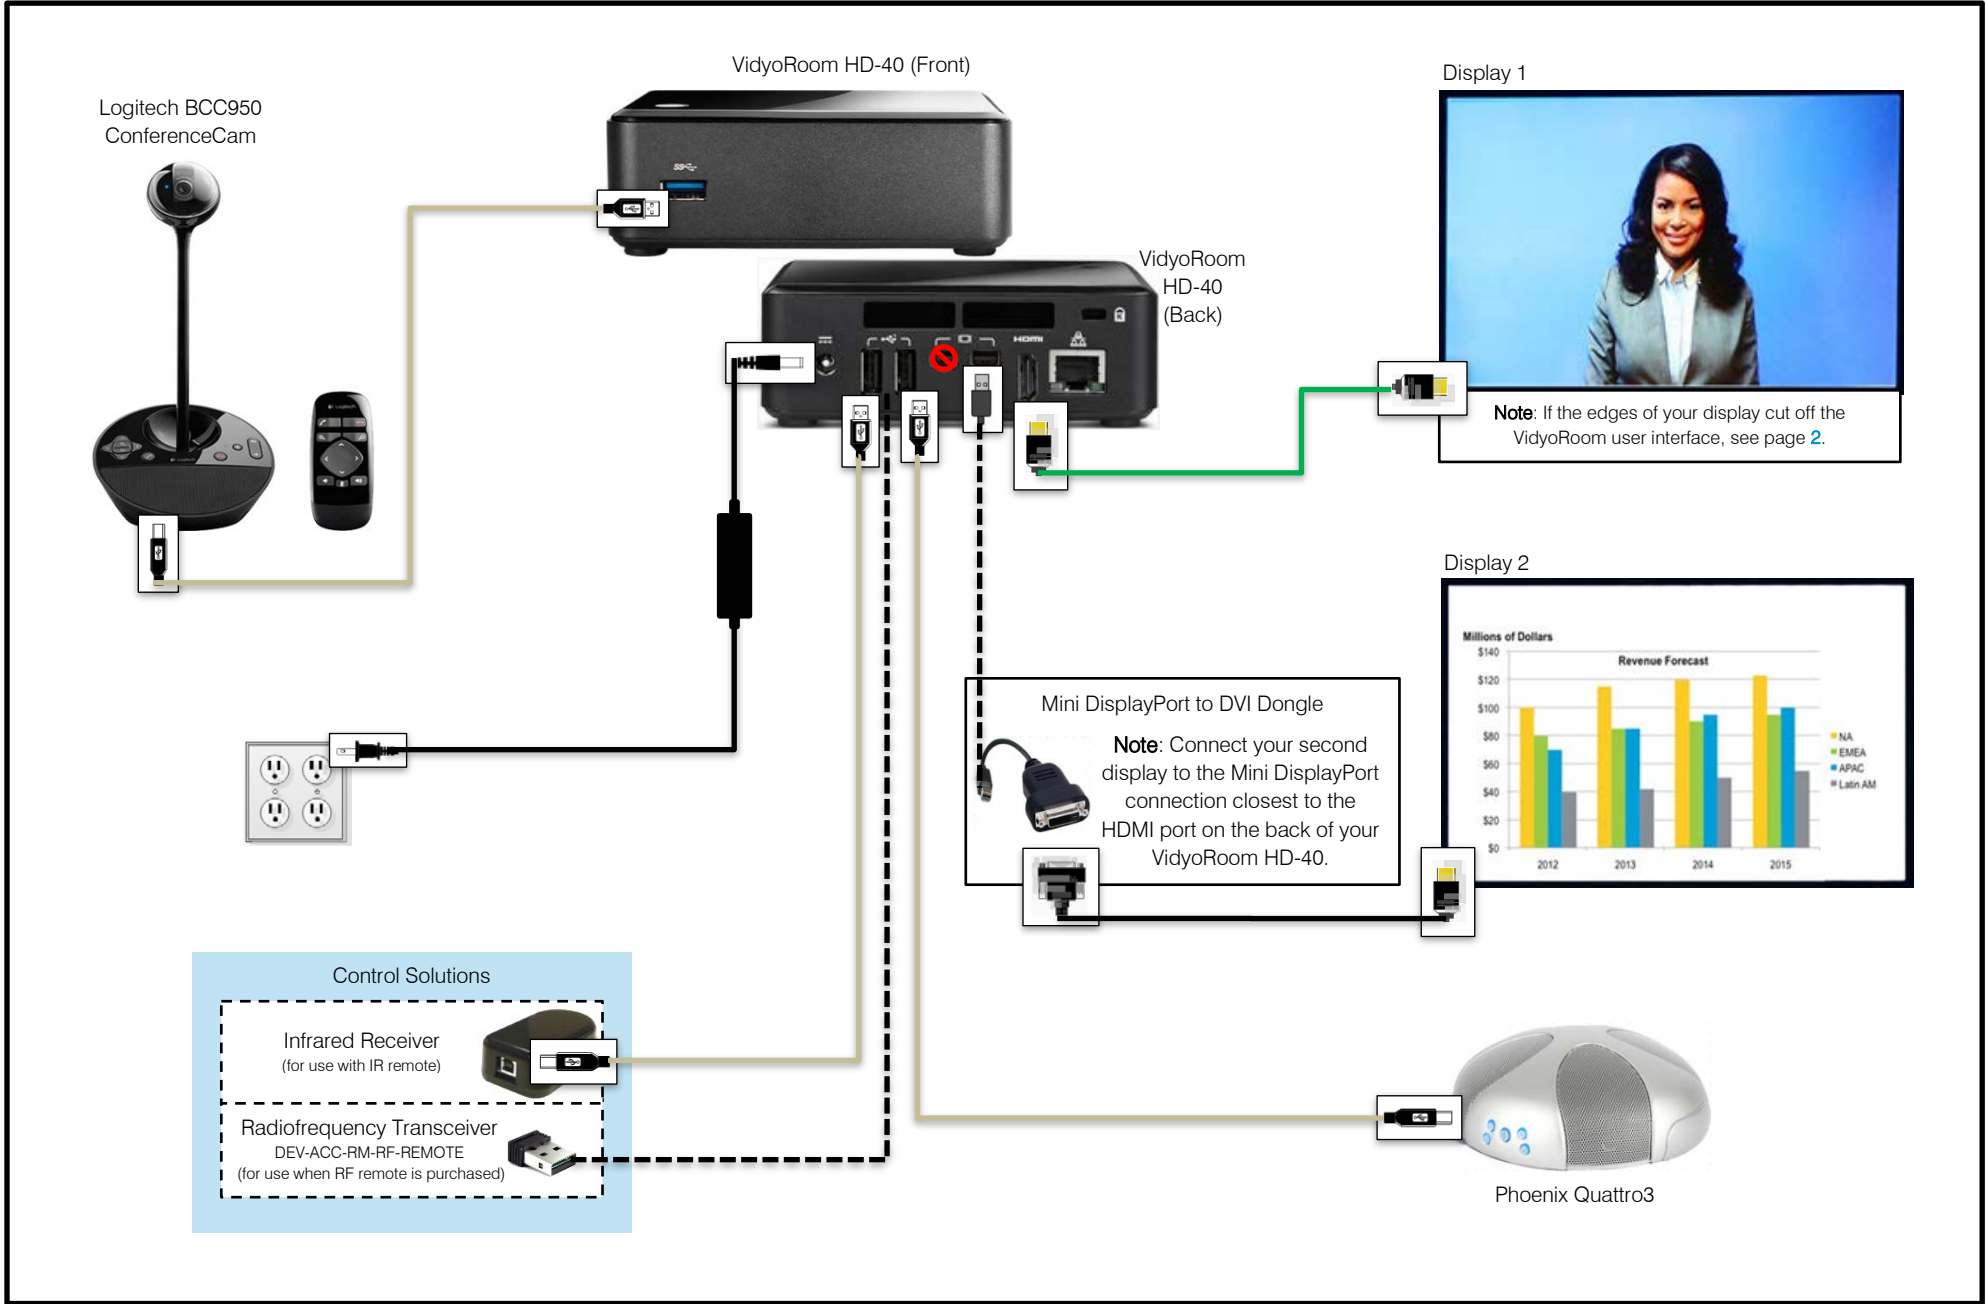

Configuring Supported Television Picture Settings

If the edges of your display cut off your VidyoRoom UI, your screen may resemble the following screenshot:

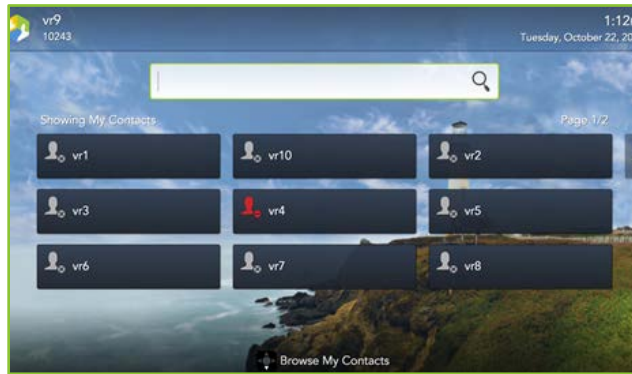

The following table describes how to configure supported television picture settings in order to properly align the user interface:

LG	Samsung	Sharp	Sony	Vizio
<ol style="list-style-type: none"> 1. Press Menu on your TV remote. 2. Select Picture > Picture Options. 3. Select Just Scan. 	<ol style="list-style-type: none"> 1. Press P. Size on your TV remote. 2. Select Screen Fit. 	<ol style="list-style-type: none"> 1. Press Menu on your TV remote. 2. Select Picture > Advanced Settings. 3. Turn OverScan Off. 	<ol style="list-style-type: none"> 1. Press Wide on your TV remote. 2. Select Wide Mode > Full. 	<ol style="list-style-type: none"> 1. Press Display on your TV remote. 2. Select Normal.


For more information, refer to the documentation provided with your television.

Configuring the Account and Network Settings

To configure the VidyoPortal™ account settings:

1. When the VidyoRoom powers up, press the **Settings** button on the remote control.


The Account screen displays the default IP address of your VidyoPortal as well as the default user name and password that came with your VidyoRoom. You must change these as described here.

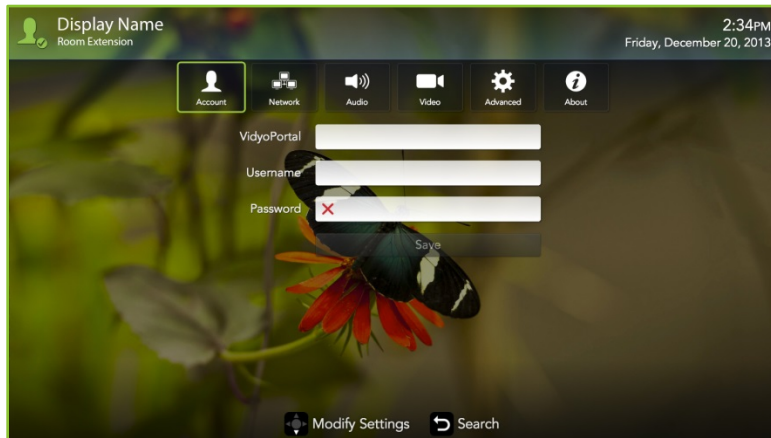

2. Navigate to the **Username** text box and use the Lucky Clover Keypad to enter the name of the VidyoPortal.
3. Navigate to the **Password** text box and use the Lucky Clover Keypad to enter the password for the VidyoPortal.
4. Navigate to the **VidyoPortal** text box and use the Lucky Clover Keypad to enter the IP address or URL of the VidyoPortal. (You don't have to enter "<http://>".)
5. Navigate to the **Save** button and press **OK** to save your settings.

To configure the network settings:

1. Use the arrow buttons to navigate to the **Network** tab and press **OK**. The Network screen appears:

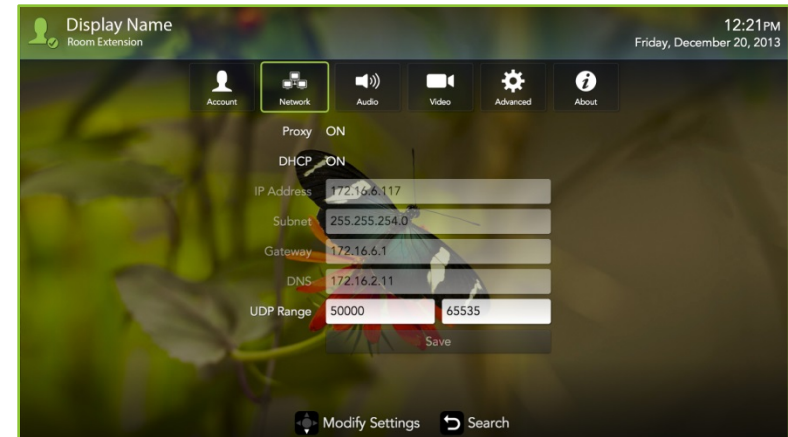

Your VidyoRoom is set to **Use DHCP** by default. This enables it to automatically obtain its IP address.

2. If you want to change your VidyoRoom network settings, press the down arrow key to the DHCP field, then the right arrow key to turn DHCP **OFF**.
3. Navigate to each text box, enter the appropriate network setting.
4. Navigate to the **Save** button and press **OK** to save your settings.

For complete information about how to configure your VidyoRoom, refer to the *VidyoRoom and VidyoPanorama 600 Administrator Guide*. For complete information about how to use your VidyoRoom, refer to the *VidyoRoom and VidyoPanorama 600 Quick User Guide*.

- To obtain user documentation and access other helpful resources, go to <http://www.vidyo.com/services-support/technical-support/product-documentation> or register at selfservice.vidyo.com/register.
- To view a list of the various peripherals available with VidyoRoom, go to <http://www.vidyo.com/support/peripherals>.